INSTALLATION INSTRUCTIONS FOR PART 99-8219

APPLICATIONS

Toyota FJ Cruiser 2007-up
99-8219




KIT FEATURES

- DIN radio provision with pocket
- ISO radio provision with pocket

KIT COMPONENTS

• A) Radio Housing • B) Housing Brackets • C) ISO Snap In Brackets • D) Trim Plate

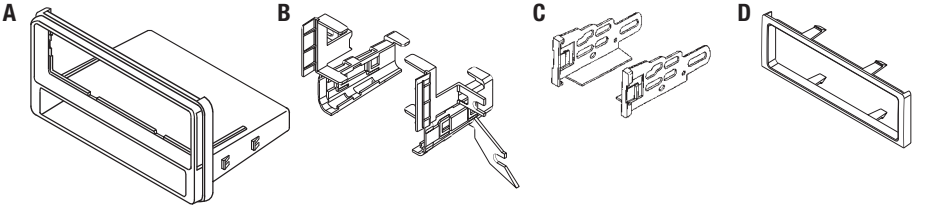

WIRING & ANTENNA CONNECTIONS (Sold Separately)

Wiring Harness:

- 70-1761 Toyota harness 1987-up

Antenna Adapter:

- Not Required

TOOLS REQUIRED

Panel Removal Tool • Phillips Screwdriver



© COPYRIGHT 2004-2011 METRA ELECTRONICS CORPORATION

Table of Contents

Dash Disassembly

– Toyota FJ Cruiser 2007-up 3

Kit Assembly

– DIN radio provision with pocket 4
– ISO radio provision with pocket 5

Caution

Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.

****NOTE: Refer also to the instructions included with the aftermarket radio.***


KNOWLEDGE IS POWER
Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.

Metra recommends MECP certified technicians


Dash Disassembly

1. Remove two Phillips screws from bottom part of side trim panels. Figure A)
2. Using a panel removal tool, carefully remove the side trim panels. (Figure B)
3. Remove (2) Phillips screws from radio trim panel. (Figure C)
4. Using panel removal tool, carefully remove radio trim panel. (Figure D)
5. Remove (4) 10 mm bolts securing the radio.
6. Unplug and remove radio.


Continue to kit assembly

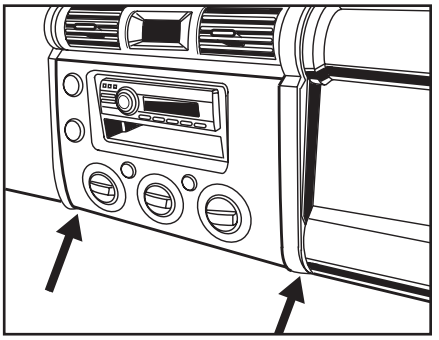


(Figure A)

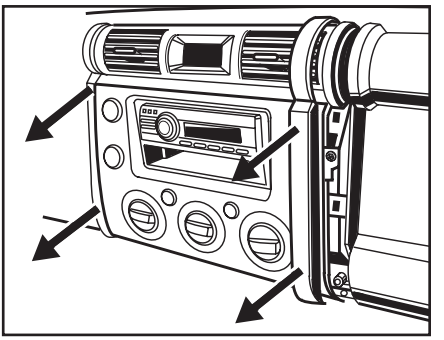

(Figure B)

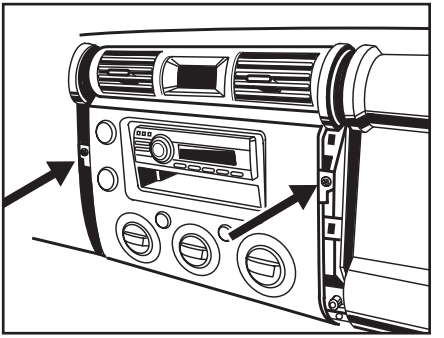


(Figure C)

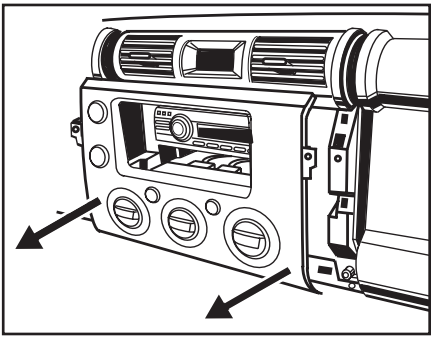


(Figure D)

DIN radio provision with pocket


1. Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXXESS. Re-connect the negative battery terminal and test the unit for proper operation.
2. Slide the housing brackets onto the side of the radio housing until the clips engage. ***Note: Brackets are marked left and right.*** (Figure A)
3. Slide the DIN cage into the radio housing and secure by bending the metal locking tabs outward. (Figure B)
4. Slide the aftermarket radio into the cage and secure. (Figure C)
5. Reassemble dash in reverse order of disassembly.

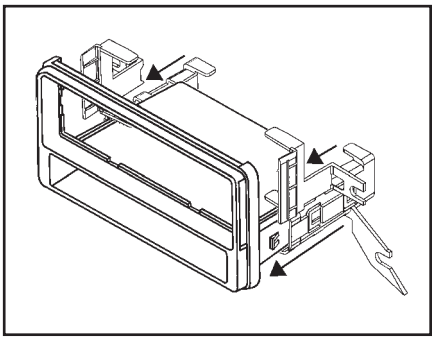

(Figure A)

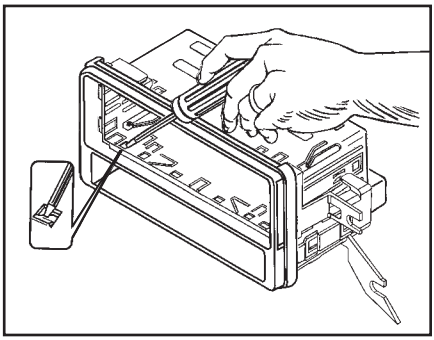


(Figure B)

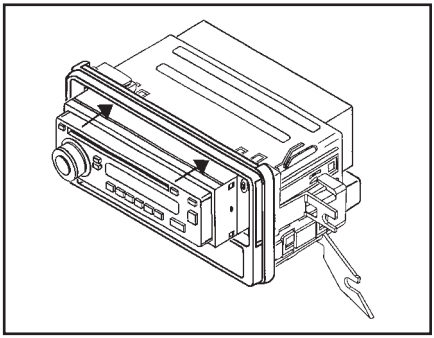


(Figure C)

ISO radio provision with pocket


1. Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXXESS. Re-connect the negative battery terminal and test the unit for proper operation.
2. Slide the housing brackets onto the side of the radio housing until the clips engage. ***Note: Brackets are marked left and right.*** (Figure A)
3. Mount the ISO brackets to the aftermarket radio using the screws supplied with the radio. (Figure B)
4. Slide the radio into the radio housing until the side clips engage. Snap the trim-plate into the radio housing. (Figure C)
5. Reassemble dash in reverse order of disassembly.

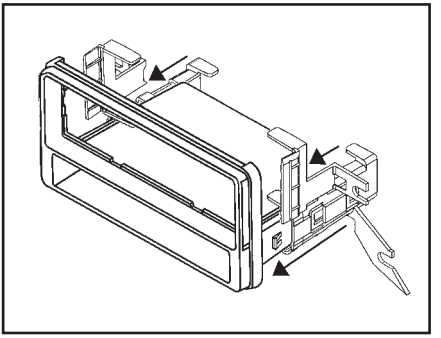

(Figure A)

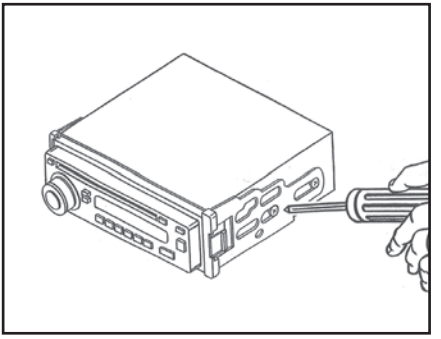

(Figure B)

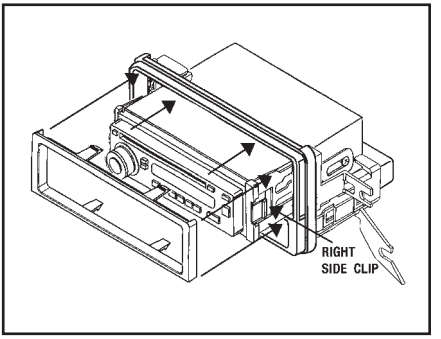

(Figure C)

Notes

INSTALLATION INSTRUCTIONS FOR PART 99-8219

REV. 7/07/11

METRA. THE WORLD'S BEST KITS.™

1-800-221-0932 metraonline.com

© COPYRIGHT 2004-2011 METRA ELECTRONICS CORPORATION