APPLICATIONS

Kia Sorento 2014-2015 *(excluding factory NAV equipped vehicles)*

99-7355B




KIT FEATURES

- ISO DIN radio provision
- ***Painted matte black***

KIT COMPONENTS

• A) Radio Housing Trim Panel • B) Brackets • C) Pocket • D) (4) #8 x 3/8" screws • E) (2) #6 x 3/8" screws

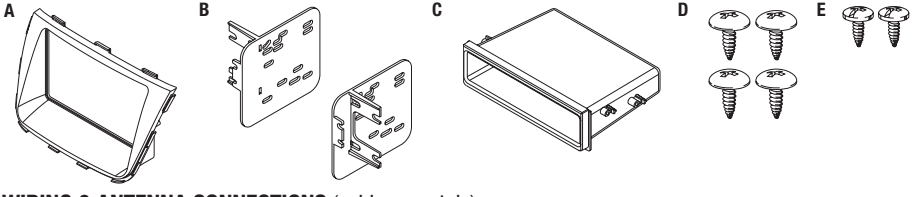

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-7304 • HYBL-04

Antenna Adapter: • Not required

TOOLS REQUIRED

• Panel removal tool • Phillips screwdriver • Socket wrench

Table of Contents

Dash Disassembly

– Kia Sorento 2014-2015..... 2

Kit Assembly

– ISO DIN radio provision..... 3

CAUTION: Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.


NOTE: Refer to the instructions included with the aftermarket radio.

REV. 2/10/2015 INST99-7355B


 © COPYRIGHT 2015 METRA ELECTRONICS CORPORATION

Dash Disassembly


1. Using soft panel tools, unsnap and remove the center dash panel surrounding the radio, disconnecting the necessary harnesses. (Figure A)
2. Remove two screws from the two vents surrounding the factory radio and remove them both. (Figure B, C)

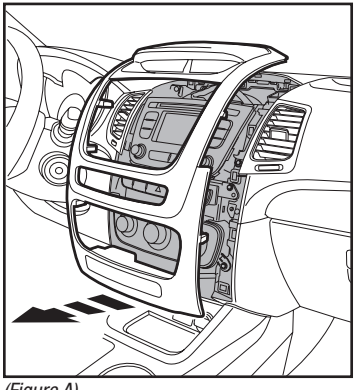

(Figure A)

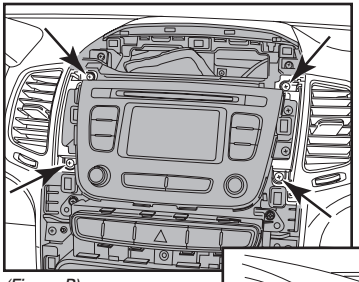


(Figure B)

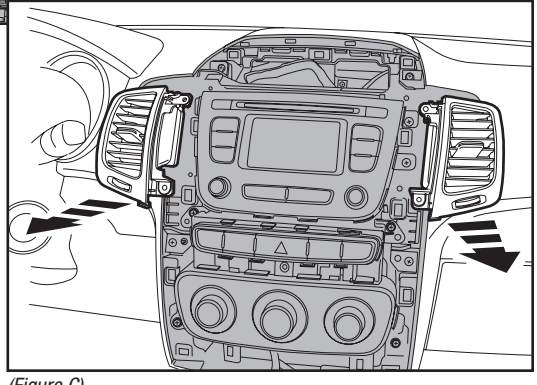

(Figure C)

3. Remove the four screws securing the factory radio and remove it from the dash. (Figure D)

Continue to kit assembly

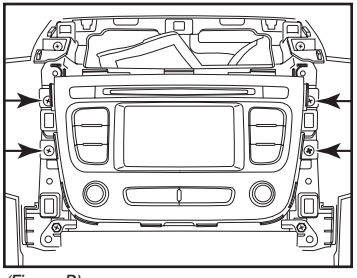


(Figure D)


Kit Assembly

ISO DIN radio provision


1. Mount the pocket to the radio brackets with the (4) #8 x 3/8" Phillips screws supplied. (Figure A)
2. Attach the brackets and pocket to the radio housing trim panel using the (2) #6 x 3/8" screws supplied. (Figure B)
3. Slide the aftermarket radio into the bracket/radio housing trim panel assembly and secure with the screws supplied with the radio. (Figure C)
4. Locate the factory wiring harness and antenna plug in the dash. Metra recommends using the proper mating adapters from Metra and/or AXXESS.
5. Reassemble dash in reverse order of disassembly.

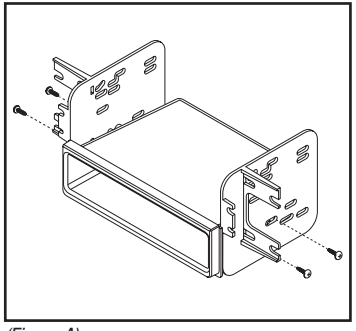

(Figure A)

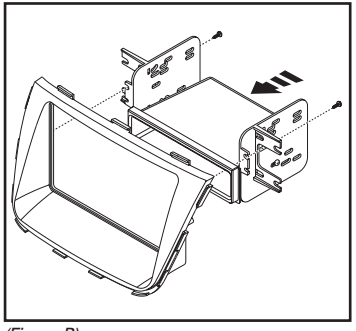

(Figure B)

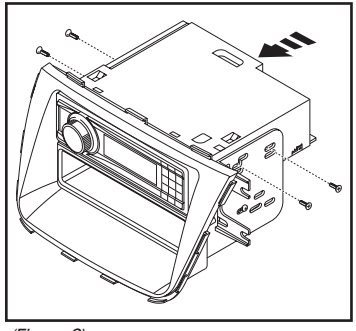

(Figure C)

REV. 2/10/2015 INST99-7355B



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



Metra recommends MECP certified technicians

 © COPYRIGHT 2015 METRA ELECTRONICS CORPORATION

APLICACIONES

Kia Sorento 2014-2015 *(excluyendo fábrica vehículos equipados NAV)*

99-7355B




CARACTERÍSTICAS DEL KIT

- Provisión de radio ISO DIN
- ***Pintura negro mate***


COMPONENTES DEL KIT

- A) Panel de moldura para carcasa de radio • B) Soportes • C) Cavidad • D) Cuatro tornillos #8 x 3/8”
- E) Dos tornillos #6 x 3/8”


A

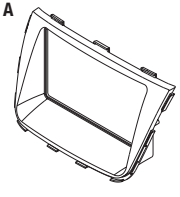


B

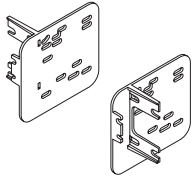

C

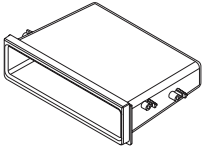

D



E



CABLEADO Y CONEXIONES DE ANTENA (se venden por separado)

Arnés de cableado: • 70-7304 • HYBL-04

Adaptador de antena: • No se requiere

Indice

Desmontaje del tablero

– Kia Sorento 2014-2015..... 2

Ensamble del kit

– Provisión de radio ISO DIN..... 3

HERRAMIENTAS REQUERIDAS

- Herramienta para quitar paneles
- Destornillador Phillips • Llave para dados

PRECAUCIÓN: Metra recomienda desconectar el terminal negativo de la batería antes de comenzar cualquier instalación. Todos los accesorios, interruptores y, especialmente, las luces indicadoras de airbag deben estar enchufados antes de volver a conectar la batería o comenzar el ciclo de ignición.


Nota: Remítase a las instrucciones incluidas con el radio de posventa.

REV. 2/10/2015 INST99-7355B


 © COPYRIGHT 2015 METRA ELECTRONICS CORPORATION

Desmontaje del tablero


1. Utilizando herramientas blandas para el panel, desenganche y quite el panel del tablero central que rodea el radio, desconectando los arneses necesarios. (Figura A)
2. Quite los dos tornillos de las dos rejillas que rodean el radio de fábrica y quítelas. (Figura B, C)

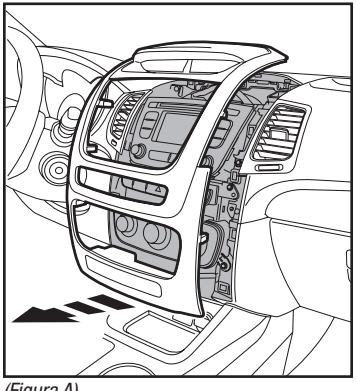

(Figura A)

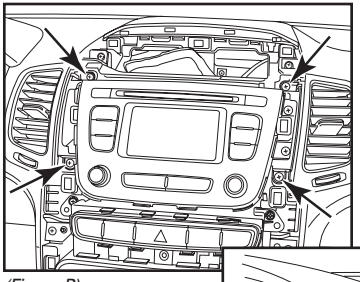


(Figura B)

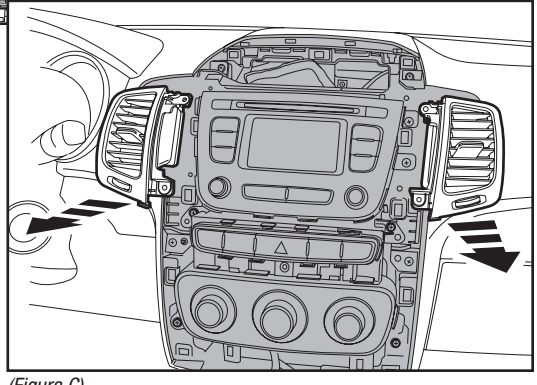

(Figura C)

3. Quite los cuatro tornillos que sostienen el radio de fábrica y quítelo del tablero. (Figura D)

Continúa en la página siguiente

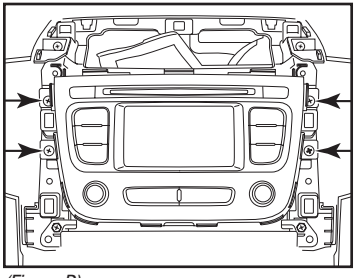


(Figura D)


Ensamble del kit

Provisión de radio ISO DIN:


1. Monte la cavidad en los soportes del radio con los (4) tornillos Phillips #8 de 3/8” suministrados. (Figura A)
2. Una los soportes y la cavidad al panel de la moldura del radio usando los (2) tornillos suministrados #6 x 3/8”. (Figura B)
3. Deslice el radio de mercado secundario dentro del ensamble del soporte/carcasa del radio y sujételo con los tornillos suministrados con el radio. (Figura C)
4. Ubique el arnés de cableado de fábrica y el conector de la antena en el tablero. Metra recomienda el uso de adaptadores adecuados de acoplamiento de Metra y/o de AXXESS.
5. Vuelva a armar el tablero al revés de como lo desarmó.

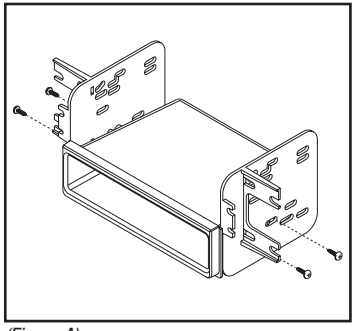

(Figura A)

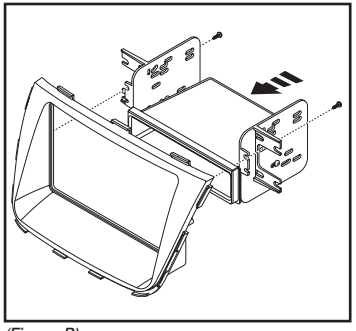

(Figura B)

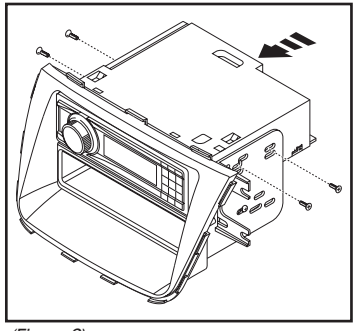

(Figura C)

REV. 2/10/2015 INST99-7355B

EL CONOCIMIENTO ES PODER

Mejore sus habilidades de instalación y fabricación inscribiéndose en la escuela de dispositivos electrónicos móviles más reconocida y respetada de nuestra industria. Regístrese en www.installerinstitute.com o llame al 800-354-6782 para obtener más información y avance hacia un futuro mejor.

Metra recomienda técnicos con certificación del Programa de Certificación en Electrónica Móvil (Mobile Electronics Certification Program, MECP).

 © COPYRIGHT 2015 METRA ELECTRONICS CORPORATION