APPLICATIONS
See application list inside

88-00-9000
AW-900PKUV, CF-900PKUV, IBR-900PKUV


KIT FEATURES

- Pocket provision for ISO DIN radio installations
- Holds (3) CD jewel cases



KIT COMPONENTS

• A) Face plate #1 • B) Face plate #2 • C) Face plate #3 • D) Pocket • E) Brackets set #1
• F) Brackets set #2 • G) (4) #8 x 1/4" Phillips screws • H) (6) #6 x 1/4" Phillips flat head screws

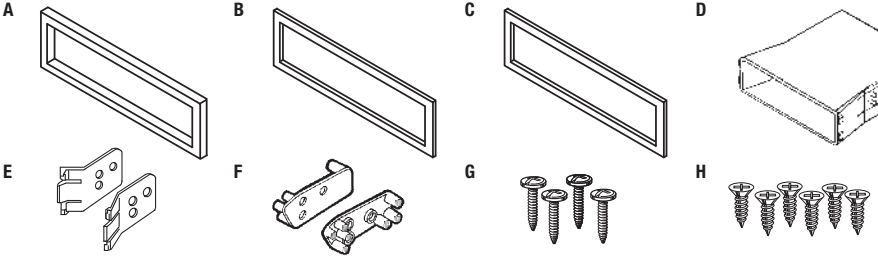

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness:
- Not applicable

Antenna Adapter:
- Not applicable

TOOLS REQUIRED

• Cutting tool • Phillips screwdriver

CAUTION: Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.

NOTE: Refer to the instructions included with the aftermarket radio.

REV. 2/26/2014 INST88-00-9000

 © COPYRIGHT 2004-2013 METRA ELECTRONICS CORPORATION

Applications

Note: *For universal pocket installations into a standard size DIN opening refer to the Ford/Mazda/Mercury installation instructions.*

Ford
Mustang 1994-2000

Infiniti
G20 1999-2002
G20 1991-1996
J30 1993-1997
M30 1990-1992
Q45 1990-2001

Lexus
ES250 1990-1991

Mazda
626 1993-2000
929 1992-1995
MX3 1992-1996
MX6 1993-1997
Protege 1995-2000
RX-7 1993-1995

Nissan
*All models equipped with stack systems except the Quest.

Saab
9-5 1999-2009
9-3 1999-2002

Toyota
4-Runner 1984-2002
Avalon 1995-1999
Camry 1983-2001
Celica 1982-1999
Corolla 1984-1997
Cressida 1981-1992
Landcruiser 1988-2002
MR2 1985-1995
Paseo 1992-1997
Pickup 1984-1995
Previa 1991-1997
Rav 4 1996-2000
Sequoia 2001-2002
Sienna 1996-2003
Solara 1999-2003
Supra 1983-1998
Supra 1994-1998
T100 1993-1998

Toyota *(continued)*
Tacoma 1995-2004
Tercel 1983-1998
Tundra 2000-2002
Van 1984-1990

Volvo
850 1993-1997
940/960 1995-1997
C70 1998-2004
S40 2000-2004
S70 1998-2000
S90/V90 1997-1998
V40 2000-2004
V70 1998-2000

Ford/Mazda


1. Snap face plate #1 onto the front of the pocket.

   Locate Bracket Set #1 and mount the “L” Bracket to the “L” side of the pocket with (3) #6 x 1/4” Phillips flat head screws and the“R” bracket to the “R” side of the pocket with (3) #6 x 1/4” Phillips flat head screws. (Figure A)


   Caution: DO NOT OVER TIGHTEN SCREWS.

2. Slide the pocket assembly into the dash opening until the side clips engage. (Figure B)

   Continue to kit assembly

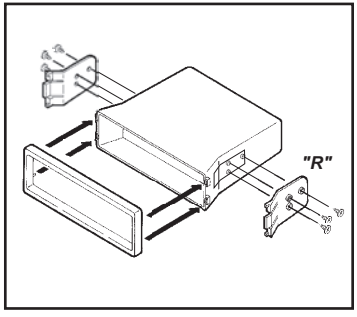

(Figure A)

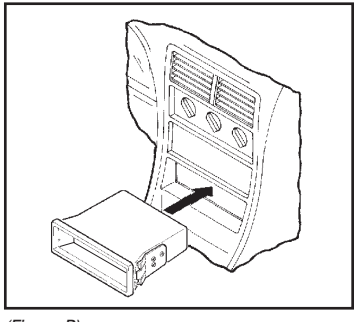
(Figure B)


Nissan/Infiniti

1. Snap face plate #3 onto the front of the pocket.


   Locate bracket set #2 and mount the “L” bracket to the “L” side of the pocket with (3) #6 x 1/4” Phillips flat head screws and the “R” bracket to the “R” side of the pocket with (3) #6 x 1/4” Phillips flat head screws. (Figure A)

   Caution: DO NOT OVER TIGHTEN SCREWS.

2. Mount the factory brackets to the shaded bosses (Figure A) with (4) #8 x 1/4” Phillips screws supplied and mount the entire assembly to the sub-dash. (Figure B)

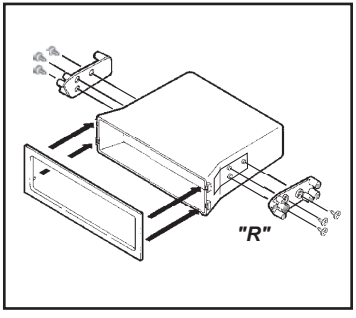

(Figure A)

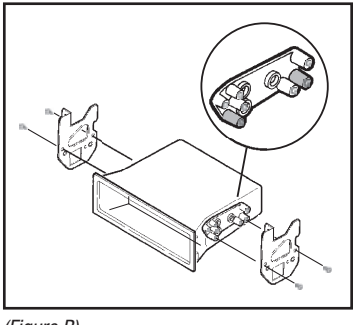

(Figure B)

Toyota/Lexus


1. Snap face plate #2 onto the front of the pocket.

   Locate bracket set #2 and mount the “L” bracket to the “L” side of the pocket with (3) #6 x 1/4” Phillips flat head screws and the“R” bracket to the “R” side of the pocket with (3) #6 x 1/4” Phillips flat head screws. (Figure A)


   Caution: DO NOT OVER TIGHTEN SCREWS.

2. Mount the pocket assembly to the factory brackets with (4) #8 x 1/4” Phillips screws supplied and mount the entire assembly to the sub-dash. (Figure B)

Volvo/Saab info on back page

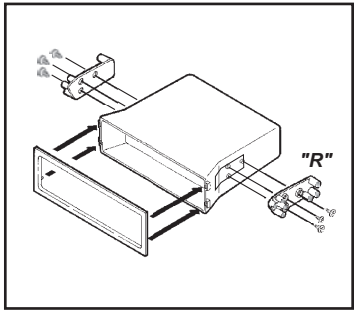

(Figure A)

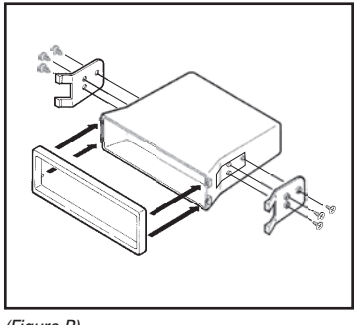


(Figure B)


Volvo/Saab

1. Cut and remove the shaded portions of Bracket Set #1. (Figure A)
2. Snap Face Plate #1 onto the front of the Pocket. Mount the “L” Bracket to the “L” side of the Pocket with (3) #6 x 1/4” Phillips Flat Head Screws and the“R” Bracket to the “R” side of the Pocket with (3) #6 x 1/4” Phillips Flat Head Screws. (Figure B)


   Caution: DO NOT OVER TIGHTEN SCREWS.
3. Slide the pocket assembly into the dash opening until the side clips engage. (Figure C)

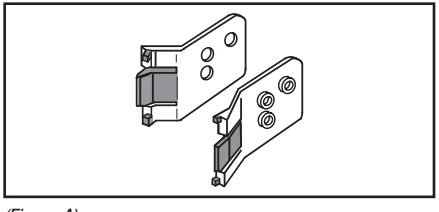

(Figure A)

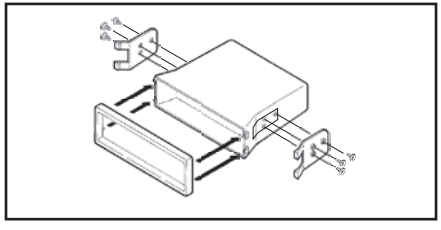

(Figure B)

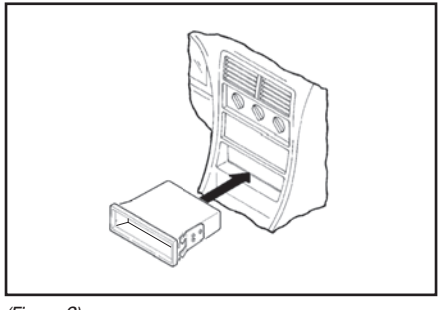

(Figure C)

REV. 2/26/2014 INST88-00-9000

KNOWLEDGE IS POWER
Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.

Metra recommends MECP certified technicians

 © COPYRIGHT 2004-2013 METRA ELECTRONICS CORPORATION