INSTALLATION INSTRUCTIONS FOR PART 95-7330

APPLICATIONS

KIA Spectra/Spectra 5
2007-2008



95-7330


KIT FEATURES

- Double DIN radio provision
- Stacked ISO mount units provision


KIT COMPONENTS

A) Double DIN Trim Plate B) Double DIN Brackets

A

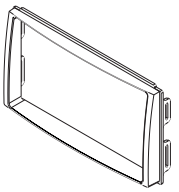

B

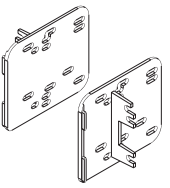

WIRING AND ANTENNA CONNECTIONS (Sold Separately)

Wiring Harness:
70-1004 Hyundai Kia harness 2004-up

Antenna Adapter:
Not Required

TOOLS REQUIRED:

Small Flat Blade Screwdriver/ Panel Removal Tool
Phillips Screwdriver



1-800-221-0932 www.metraonline.com

© COPYRIGHT 2004-2007 METRA ELECTRONICS CORPORATION

TABLE OF CONTENTS

Dash Disassembly

- KIA Spectra/Spectra 5 2007-2008 1

Kit Assembly

- Double DIN/stacked ISO mount units provision 2

Final Assembly *. 3*

Note:
Refer also to the instructions included with the aftermarket radio.

KIA SPECTRA/SPECTRA 5 2007-2008


1 Disconnect the negative battery terminal to prevent an accidental short circuit.

2 Unclip and remove the trim panel surrounding the radio and including the a/c vents. **(Figure A)**


3 Remove (4) Phillips screws securing the radio. Unplug and remove radio. **(Figure B)**

Continue to kit assembly.

A

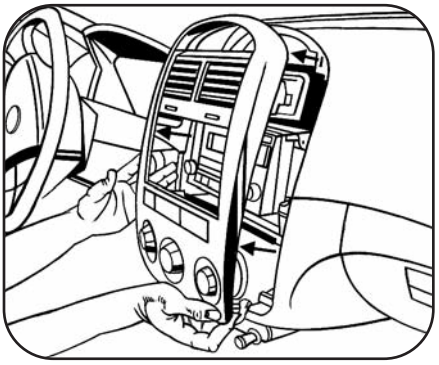

B

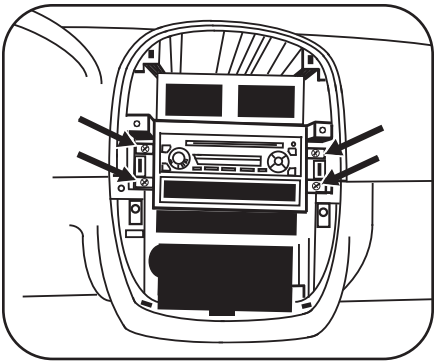

DOUBLE DIN RADIO PROVISION
STACKED ISO MOUNT UNITS PROVISION


Note: Refer also to the instructions included with the aftermarket radio.

1 Snap the Double DIN brackets to the inside edge of the Double DIN trim plate. **(Figure A)**


2 Slide the Double DIN radio or the stacked ISO mount units into the bracket/trim plate assembly and secure the radio or ISO mount units to the assembly using the screws supplied with the radio or ISO mount units. **(Figure B)**

Continue to final assembly.


A

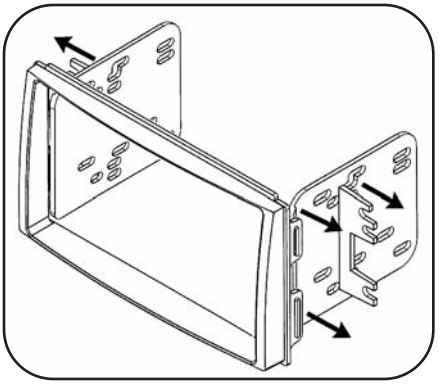

B

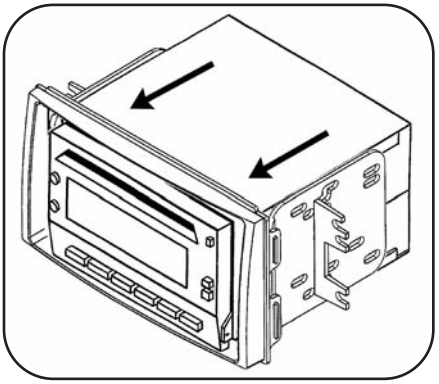

FINAL ASSEMBLY

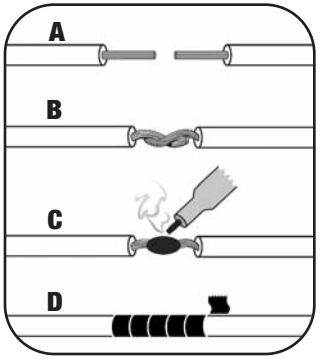

(A) Strip wire ends back 1/2"

B) Twist ends together

C) Solder

D) Tape

1 Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit.)

2 Re-connect the negative battery terminal and test the unit for proper operation.

3 Reassemble radio and dash assemblies in reverse order of disassembly.

FINAL WIRING CONNECTIONS

Make wiring connections using the EIA color code chart shown below and the instructions included with the head unit. Metra recommends making connections as shown below; Strip, Splice, Solder, Tape. Isolate and individually tape off ends of any unused wires to prevent electrical short circuit.

METRA / EIA WIRING CODE

12V Ignition / Acc	Red
12V Batt / Memory	Yellow
Ground	Black*
Power Antenna	Blue
Amp Turn-On	Blue / White
Amp Ground	Black / White
Illumination	Orange
Dimmer	Orange / White
Right Front (+)	Gray
Right Front (-)	Gray/ Black
Left Front (+)	White
Left Front (-)	White / Black
Right Rear (+)	Violet
Right Rear (-)	Violet / Black
Left Rear (+)	Green
Left Rear (-)	Green / Black

***NOTE:** When a Black wire is not present, ground radio to vehicle chassis.
All colors may not be present on all leads due to manufacturer's specifications.

NOTES

NOTES

95-7330 INSTRUCTIONS

1-800-221-0932 www.metraonline.com

REV. 06/21/11 © COPYRIGHT 2004-2007 METRA ELECTRONICS CORPORATION INST95-7330