OPERATING INSTRUCTIONS

001




002



003



004

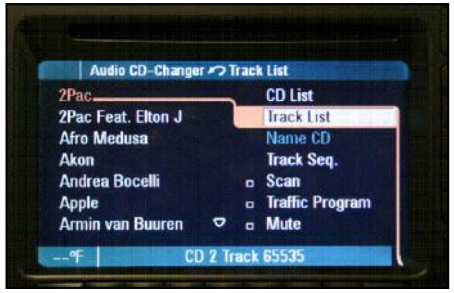

POR-iPOD

iPOD INPUT (MOST)


ALL PORSCHE

LOCATION & REMOVAL

Installation can be made at the factory CD changer or at the front unit location.

You will need to access the orange fiber optic cables (BLACK PLUG) that is plugged into the front unit or CD changer; this may require you to remove the CD Changer.



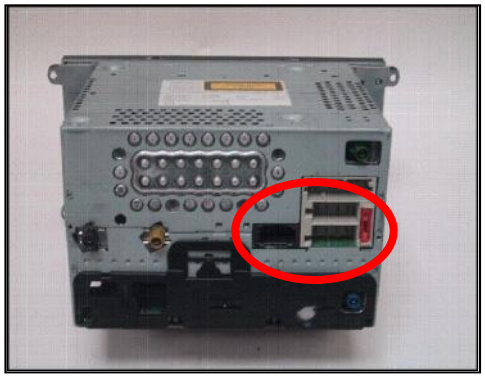


INSTALLATION

Remove the BLACK plug from the CD changer that contains the orange fiber optic cables and insert it into the POR-i-POD interface, plug in the i-POD loom to the interface and route to desired location. Next supply a 12v+ Permanent supply to the Red cable and suitable Earth to the Black cable and plug into the interface **(if fitted at the CD Changer location).** The interface can also be fitted at the front unit as diagram below shows **using the supplied black joiner to connect the fiber optics end to end at the CD changer plug in the boot to continue the loop,** and using the supplied Plug in Power harness at the front unit plug.





If there is no CD changer you will need to connect the fiber optic cable supplied into the plug at the front unit to create a loop as shown.

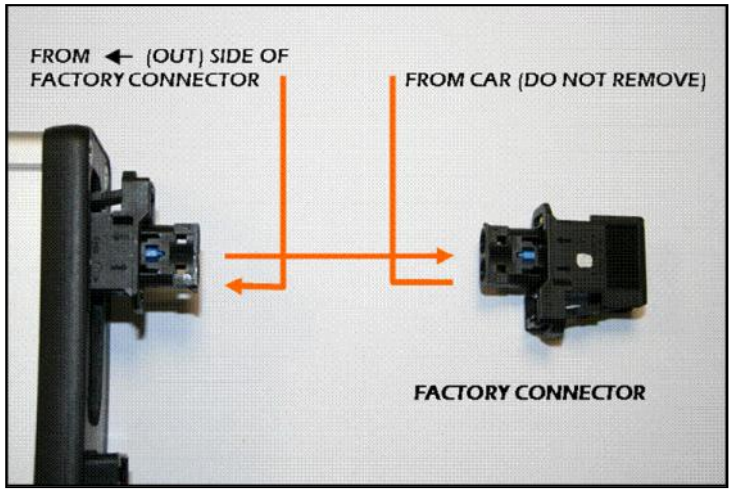

OPERATING INSTRUCTIONS

The i-POD can be accessed via the CDC button on the front unit. Menus, listings and tracks are found under the CD list and CD track menu (via Audio button) and operated with the right hand round button. Detailed operating instructions are as follows;

Use the right hand round button to select CD LIST (fig 1), the menu will then appear for you to select from playlists, artists, albums etc (fig2), when you have selected your chosen field by pushing the right hand round button the screen will revert back as fig1, you then need to wait for your chosen field to appear in the orange box (below CD 1 2 3 4 5 6) and for the CD number to change, once it has appeared you may use the same button to select the TRACK LIST option (fig 4) to then choose your playlist, artist, album etc. To play your chosen track or album you will now need to select “play selection” via the CD list option.

The factory track skip will skip, tracks, artists, genres, albums etc depending on what you have selected in the orange box.

The numbered buttons can also be used to directly select track numbers, e.g. press 1 then 2 to go to track 12 etc. Shortcut buttons are as follows;

-Hold button 2 for Playlists

-Hold button 3 for Artists

-Hold button 4 for Albums

-Hold button 5 for Genre